



Replacing a Door Lock - Washer-Extractor



To reduce the risk of electric shock, fire, explosion, serious injury or death:
Disconnect electric power to the machine(s) before servicing.
Close shut-off valve to gas dryer(s) before servicing.
Never start the machine(s) with any guards/panels removed.

Symptoms

Solutions

Door Does Not Lock

- Power down and restart machine
- Check programming
- Check if door magnet is present
- Check wiring and switches
- Check door lock solenoid
- Clean pressure bulb and line
- Check for remaining water in the cylinder
- Replace door lock

Door Does Not Unlock

- Power down and restart machine
- Check programming
- Check if door magnet is present
- Check wiring and switches
- Check door lock solenoid
- Clean pressure bulb and line
- Check for remaining water in the cylinder
- Replace door lock

Control Senses Door is Open

- Power down and restart machine
- Check if door magnet is present
- Check wiring and switches
- Replace door lock

Door Lock Releases During Cycle

- End cycle. Power down and restart machine. Restart cycle
- Check if door magnet is present
- Check wiring and switches
- Check door lock solenoid
- Replace door lock

Watch our product trainer demonstrate replacing a door lock at <http://alsu.alliancels.net/Service-Videos/Huebsch>

