



Replacing a Door Lock - Softmount Washer-Extractor



To reduce the risk of electric shock, fire, explosion, serious injury or death:
Disconnect electric power to the machine(s) before servicing.
Close shut-off valve to gas dryer(s) before servicing.
Never start the machine(s) with any guards/panels removed.

Symptoms

Solutions

**Door Does
Not Lock**

- Power down and restart machine
- Check wiring and switches
- Check door handle
- Check for remaining water in the cylinder
- Replace door lock

**Door Does
Not Unlock**

- Power down and restart machine
- Check wiring and switches
- Check door handle
- Check for remaining water in the cylinder
- Replace door lock

**Control
Senses Door
is Open**

- Power down and restart machine
- Check wiring and switches
- Replace door lock

**Door Lock
Releases
During Cycle**

- End cycle. Power down and restart machine. Restart cycle
- Check wiring and switches
- Check door handle
- Replace door lock

Watch our product trainer demonstrate replacing a door lock at
<http://alsu.alliancels.net/Service-Videos/Huebsch>