



To reduce the risk of electric shock, fire, explosion, serious injury or death:
 Disconnect electric power to the machine(s) before servicing.
 Close shut-off valve to gas dryer(s) before servicing.
 Never start the machine(s) with any guards/panels removed.

Symptoms

Solutions

Door Does Not Lock

- Open and reclose door
- Check for stuck clothing
- Check wiring
- Check and adjust door strike
- Replace door lock

Door Does Not Unlock

- End cycle. Power down 3 min. and restart machine
- Check if machine is overloaded
- Check and adjust door strike
- Check wiring
- Check for remaining water in the cylinder
- Clean pump trap or drain valve
- Replace door lock

Control Senses Door is Open During a Cycle

- Power down and restart machine. Restart cycle
- Check and adjust door strike
- Check wiring
- Replace door lock

Watch our product trainer demonstrate replacing a door lock at <http://alsu.alliancels.net/Service-Videos/Huebsch>