



**To reduce the risk of electric shock, fire, explosion, serious injury or death:**  
Disconnect electric power to the machine(s) before servicing.  
Close shut-off valve to gas dryer(s) before servicing.  
Never start the machine(s) with any guards/panels removed.

## Symptoms

## Solutions

**Washer will  
Not Fill**

- Clean filter screens
- Check if door is closed and locked
- Check for kinked fill hoses
- Check if water is turned on
- Check if mixing valve is receiving voltage
- Replace mixing valve

**Water Filled  
Too High**

- Unplug machine, check if water stops dripping into tub
- Water is still dripping, replace mixing valve

Watch our product trainer demonstrate replacing the mixing valve at <http://alsu.alliancels.net/Service-Videos/Huebsch>